



Locking Door Pull Installation

(Floor Receiver and Lock Core Installation)

Locking Door Pull Installation

Materials:



Linkage



Small Format IC Core



Door Pull Extension Kit:
Components needed for a 1-3/4"
Door (Wood or Aluminum Framed)
with a Locking Door Pull. These
items will be packaged separately
from the Door Pull.


Components needed for a glass door are included in the Door Pull's packaging




Floor Receiver

Locking Door Pull Installation


Floor Receiver Installation:

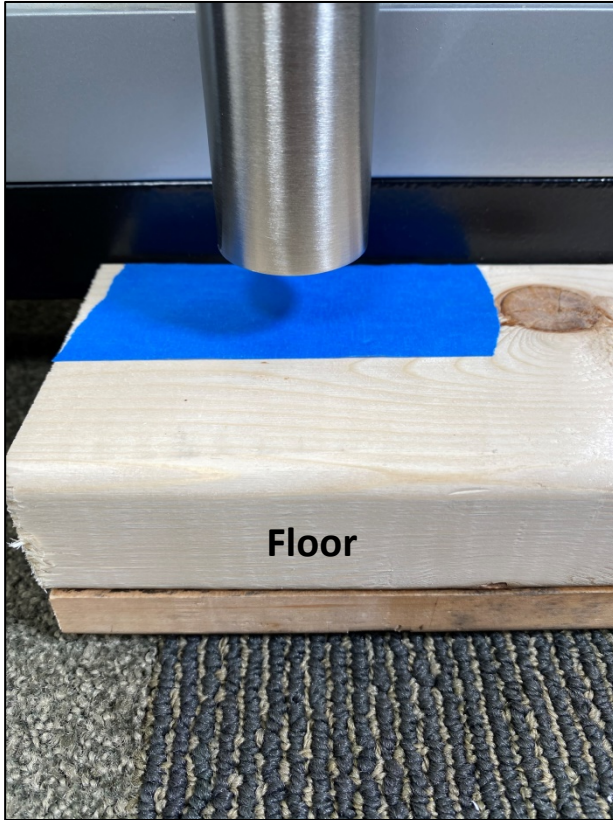

Place the door in the closed position. We recommend using painters' tape under the Door Pull to help determine the location of the lock bolt.

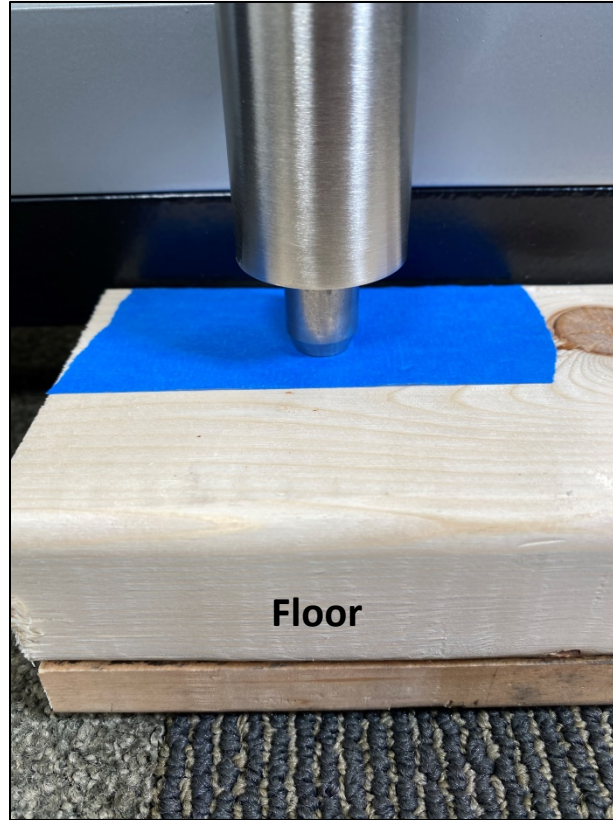

Operate the thumb-turn to drop the lock bolt to the floor. Mark the location of the locking bolt on the floor. We recommend using a fine tip pen to be as accurate as possible.

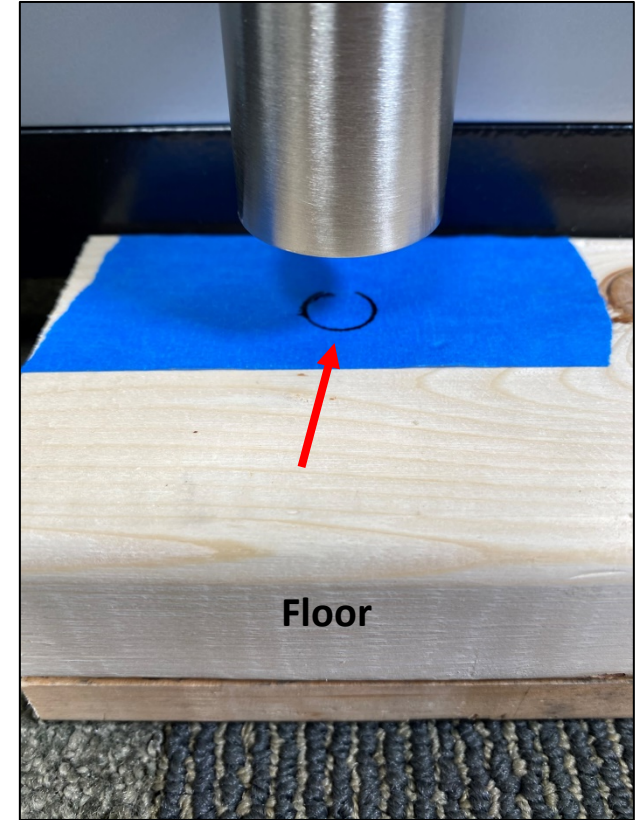

Important: The door must be hanging straight down when determining the hole location. It cannot be pushed to the inside or outside. Any slight variance could lead the key to not work properly due to the lock bolt binding on the floor receiver.

Locking Door Pull Installation

Floor Receiver Installation:




Using a hammer drill (depending on floor type) drill a 1" hole where the floor is marked.

We recommend drilling a pilot hole with a smaller bit in the center of the marked location prior drilling with the larger bit to ensure the hole location.



Insert the floor receiver into the floor.

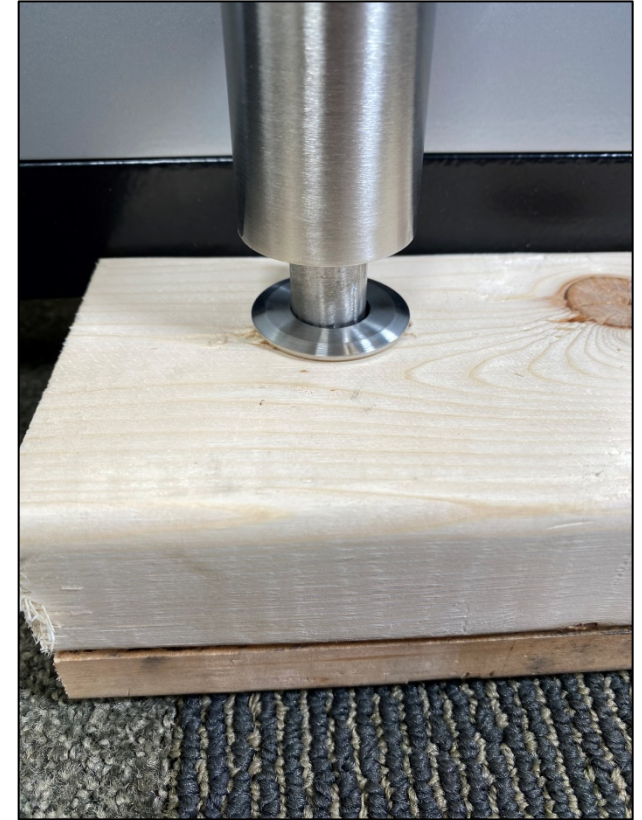

Operate the thumb-turn to test the lock bolt.

Floor Receiver installation is complete.

Locking Door Pull Installation

Lock Core Installation:




Insert the Control Key into the core. The Control Key is identified with a “C” or “CTL” on the key.
Note: Only 1 Control Key is shipped for each project.

Insert the pins on the linkage into the core.

IMPORTANT: The small pin on the end of the linkage **MUST** be pointing **UP** when installing the core and linkage.

Locking Door Pull Installation

Lock Core Installation:

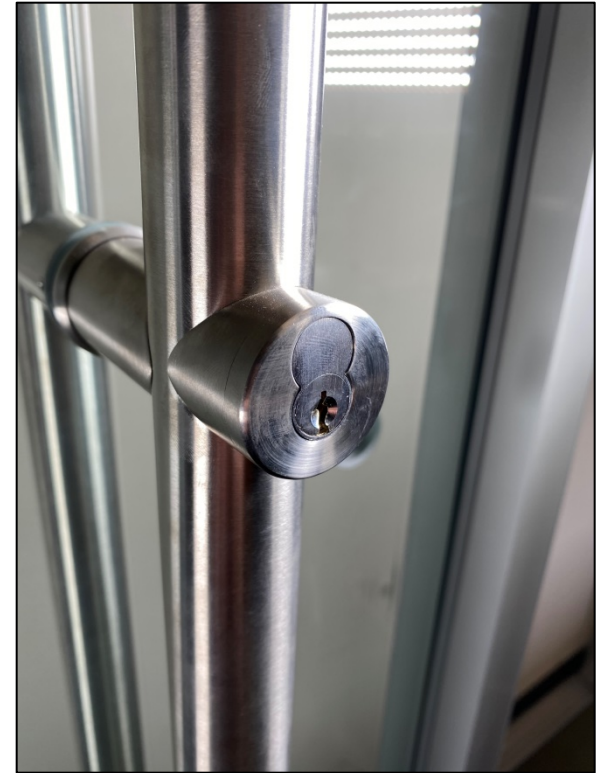

Prior to installing the core and linkage make sure the locking bolt on the bar-pull is all the way up into the bar-pull. This can be done by turning the thumb turn. If it is not all the way up when installing the core the locking bolt will not function properly.

With the Control Key placed inside the core, insert the core and linkage into the Door Pull. Make sure they are in the correct orientation.

Lock the core into place with the Control Key. Insert the core's key to test the lock. Make sure the key can be removed in the locked and unlocked position.

Installation is complete.