



View Series


Sliding Glass Door Installation

View Series Frameless Glass Sliding Door Installation


Materials:

****If there are Soft Open/Close Units please reference the Soft Open/Close Installation Guide. The Carriage Assembly is different for Soft Open/Close Units****

Note: "DOOR EDGE" arrow to be pointed towards the edge of the door.

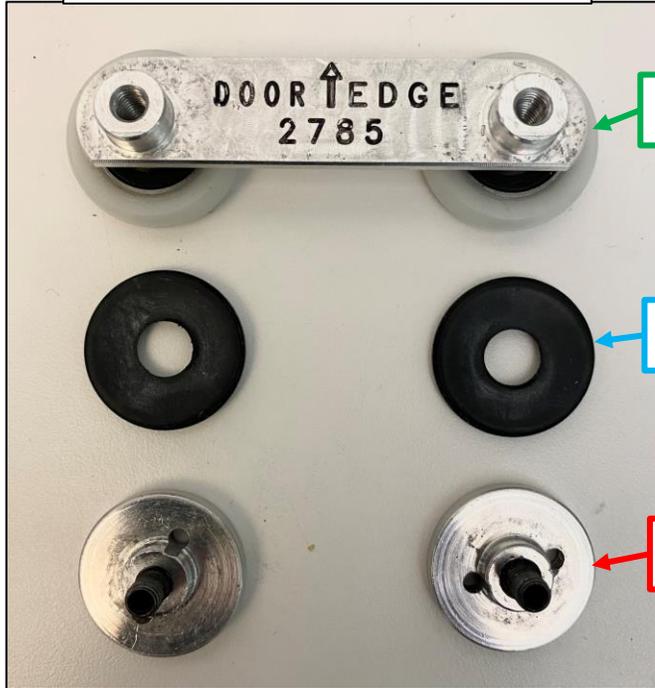

Carriage Frame Assembly

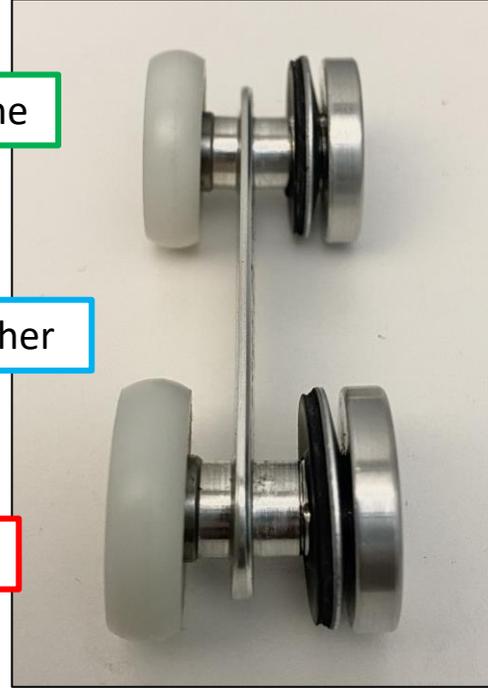

Carriage Frame Assembly Orientation

Note: Thinner portion of the carriage towards the edge of the door



Door Stop for Sliding Glass Doors




D-Pad for Sliding Glass Doors



Adjustable Spanner Wrench for tightening Carriage Caps

View Series Frameless Glass Sliding Door Installation

Carriage Assembly Installation:

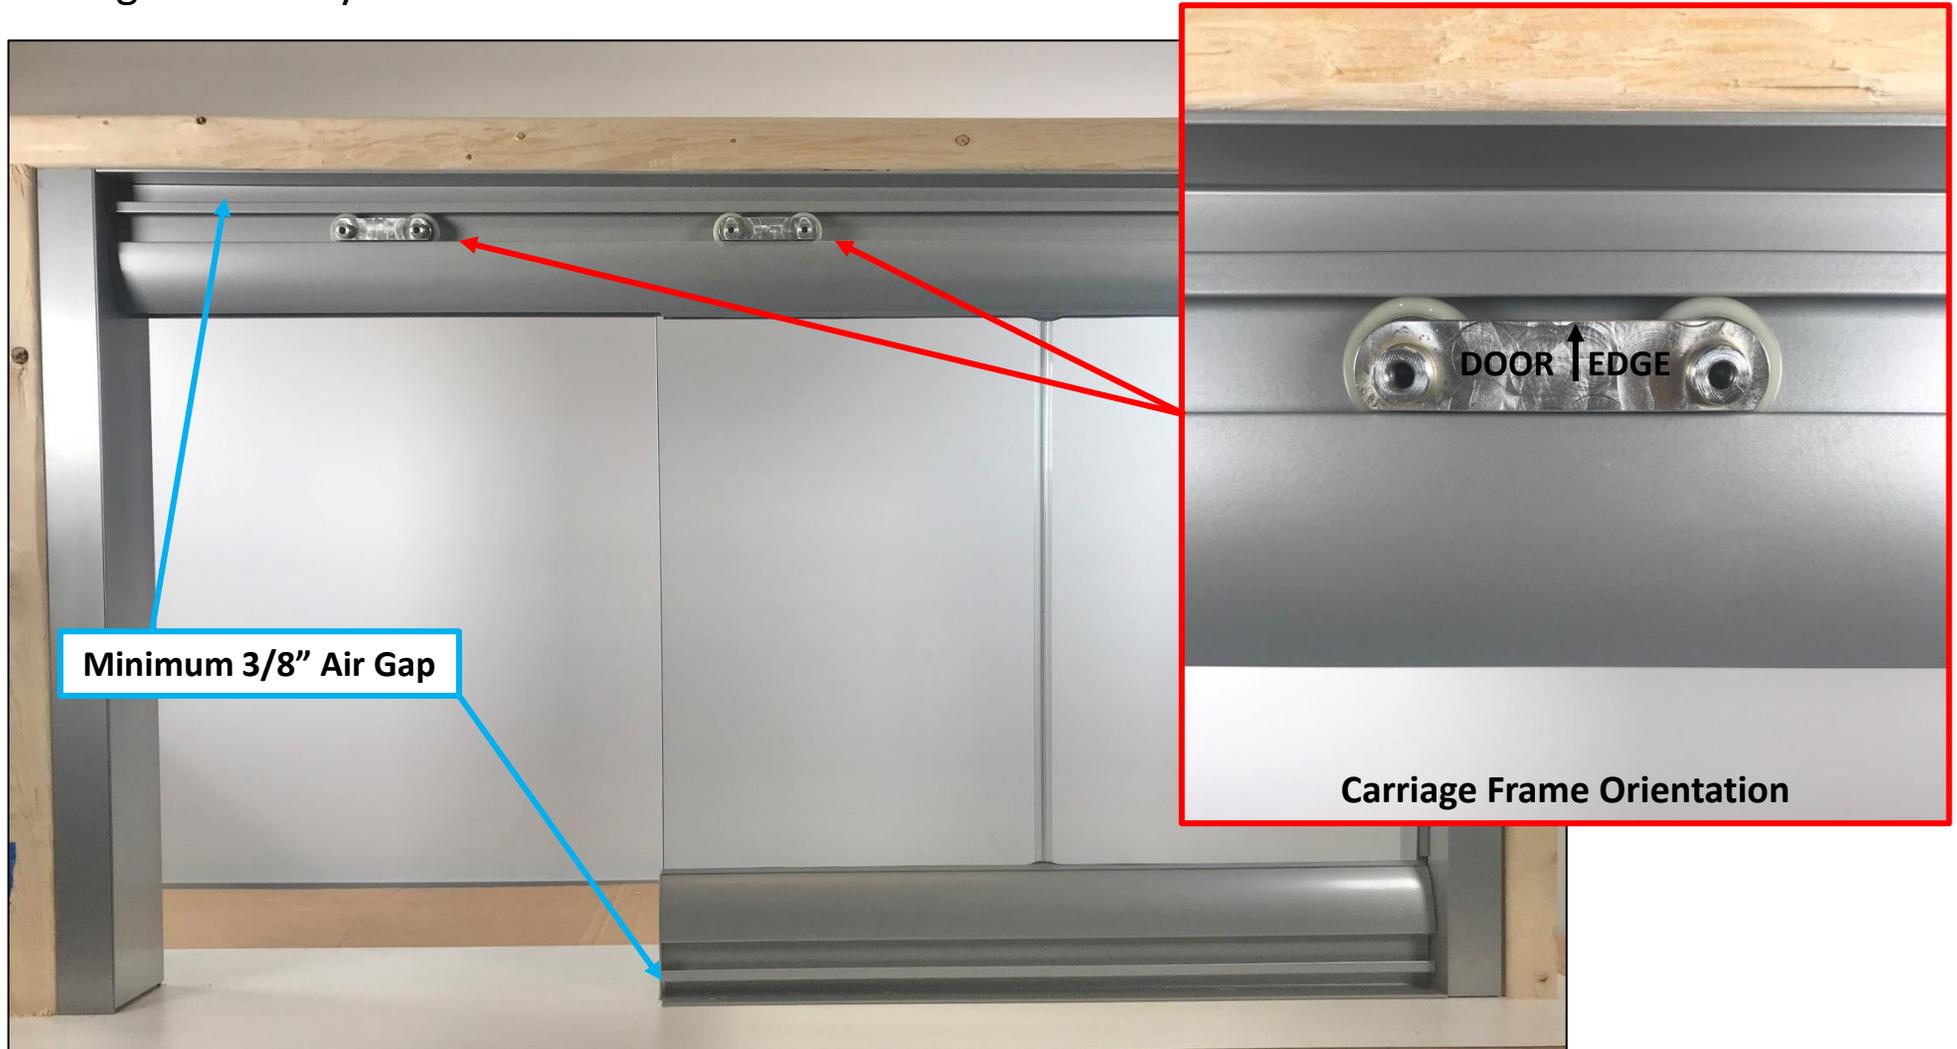

Prior to installing the door make sure the minimum 3/8" air gap is installed between the View Track and Guide at the ceiling and the floor. If the gap is not installed the door will not function properly.


Install the Carriage Frame into the View Track with the flat side of the frame down with the "DOOR EDGE" arrow pointing towards the top edge of the door, orientation shown above. To install the Carriage place the wheels into the bottom part of the View Track and press the Carriage until the wheels snap into the Track.

View Series Frameless Glass Sliding Door Installation

Carriage Assembly Installation:



With the Carriages already in the View Track, place the glass door on shims to align the holes in the door with the Carriages. Press the door tight to the View Track to allow the Carriages to go through the holes, as shown above.

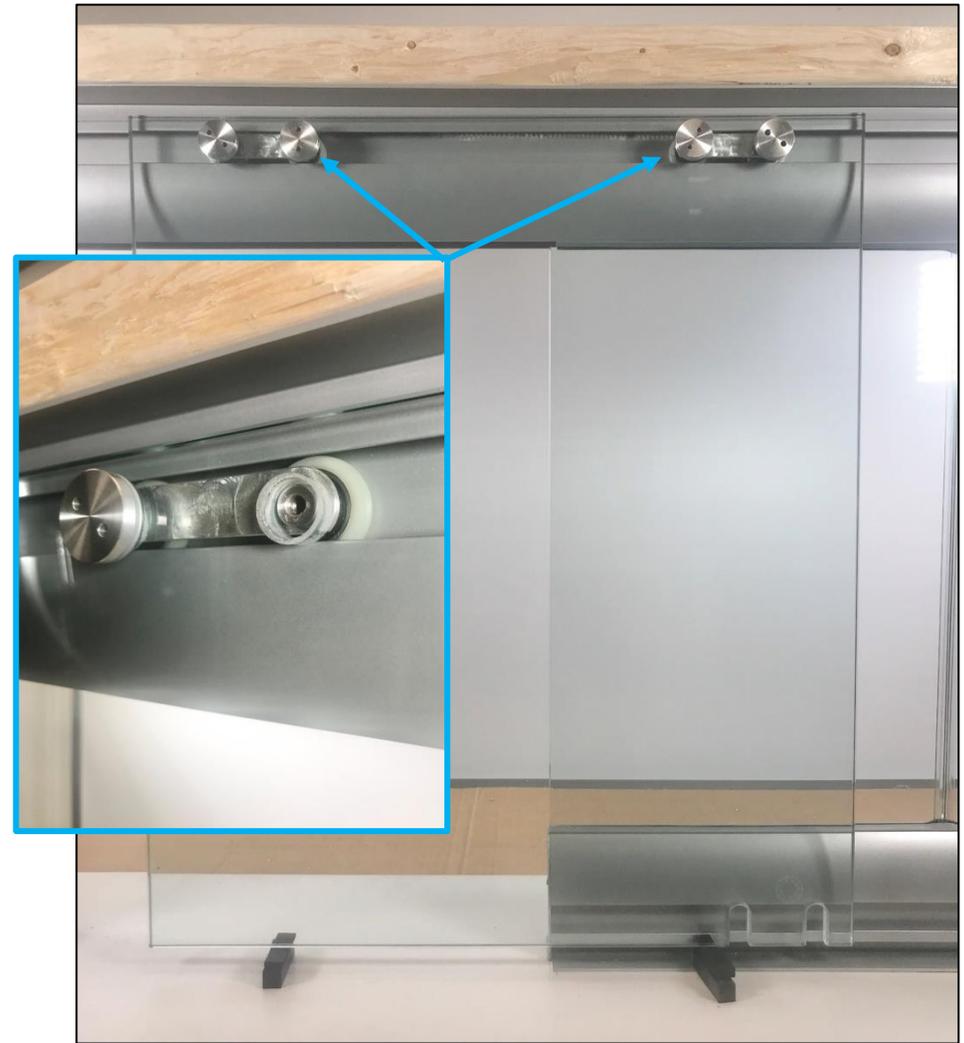

Install the Carriage Caps with Washers onto the Carriage Frames going through the door. Tighten the Carriage Caps with a spanner wrench. Avoid overtightening the Carriage Caps, for overtightening will prevent the door from sliding smoothly.

View Series Frameless Glass Sliding Door Installation

Carriage Assembly Installation:



On View Series Frameless Sliding Glass Doors there is a horseshoe shaped cutout at the bottom of the door. A Carriage assembly will be installed in that location. To install the Carriages, repeat the installation process used for the top of the door.




Install Carriage Caps with Washers onto the Carriage Frame. Center the Carriage within the Track and then tighten the Carriage Caps. The Carriage at the bottom of the door acts as the floor guide for the door.


Note: Carriage at the bottom of the door has been replaced with a system mounted floor guide. Please reference "View Series System Mounted Floor Guide" installation guide.

View Series Frameless Glass Sliding Door Installation

D-Pad Installation & Door Adjustment:

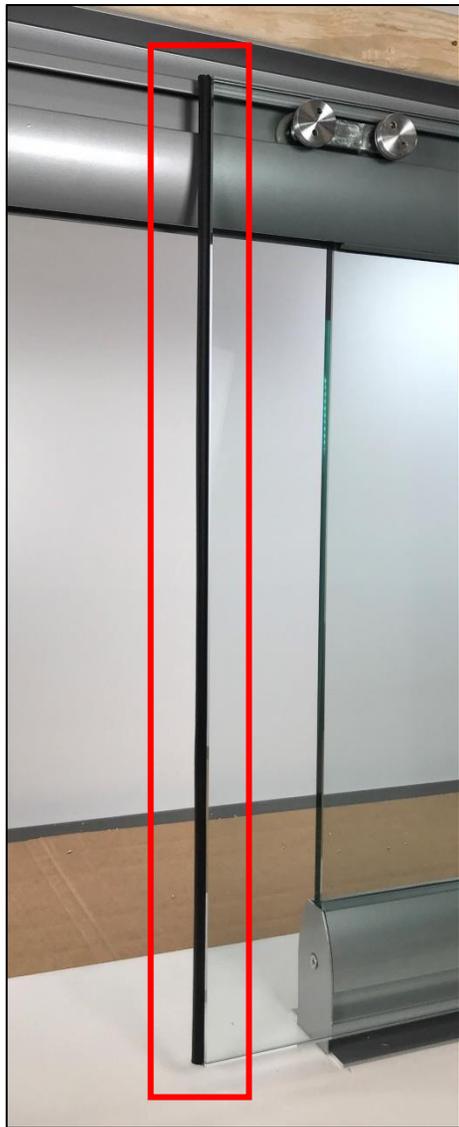

Install the D-Pad on the edge of the door. The D-Pad will close any light gap between the framing and the door when the door is closed.

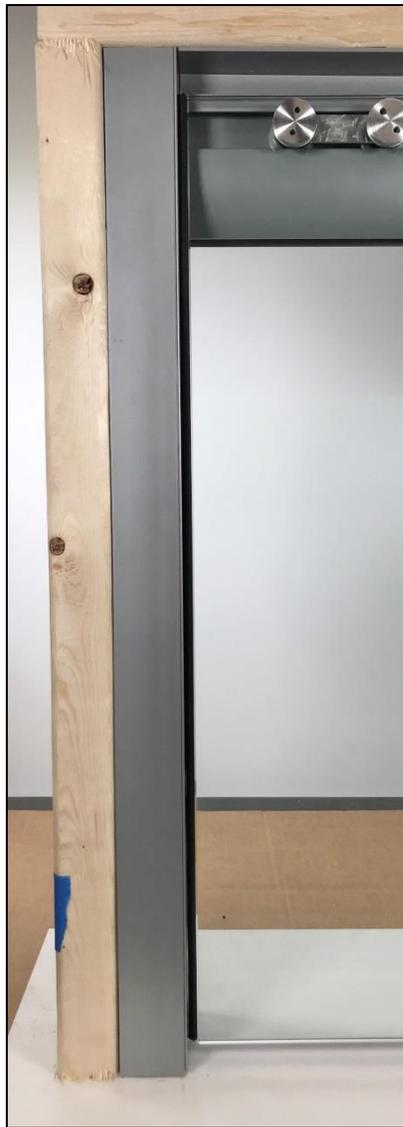


If there is an uneven gap between the framing and the door when the door is closed, adjust the attaching screw within the door opening to create tight and even gap.



****Please reference the View Series Framing Installation Guide for further information on the attaching screw within the door opening****

View Series Frameless Glass Sliding Door Installation

Door Stop Installation:

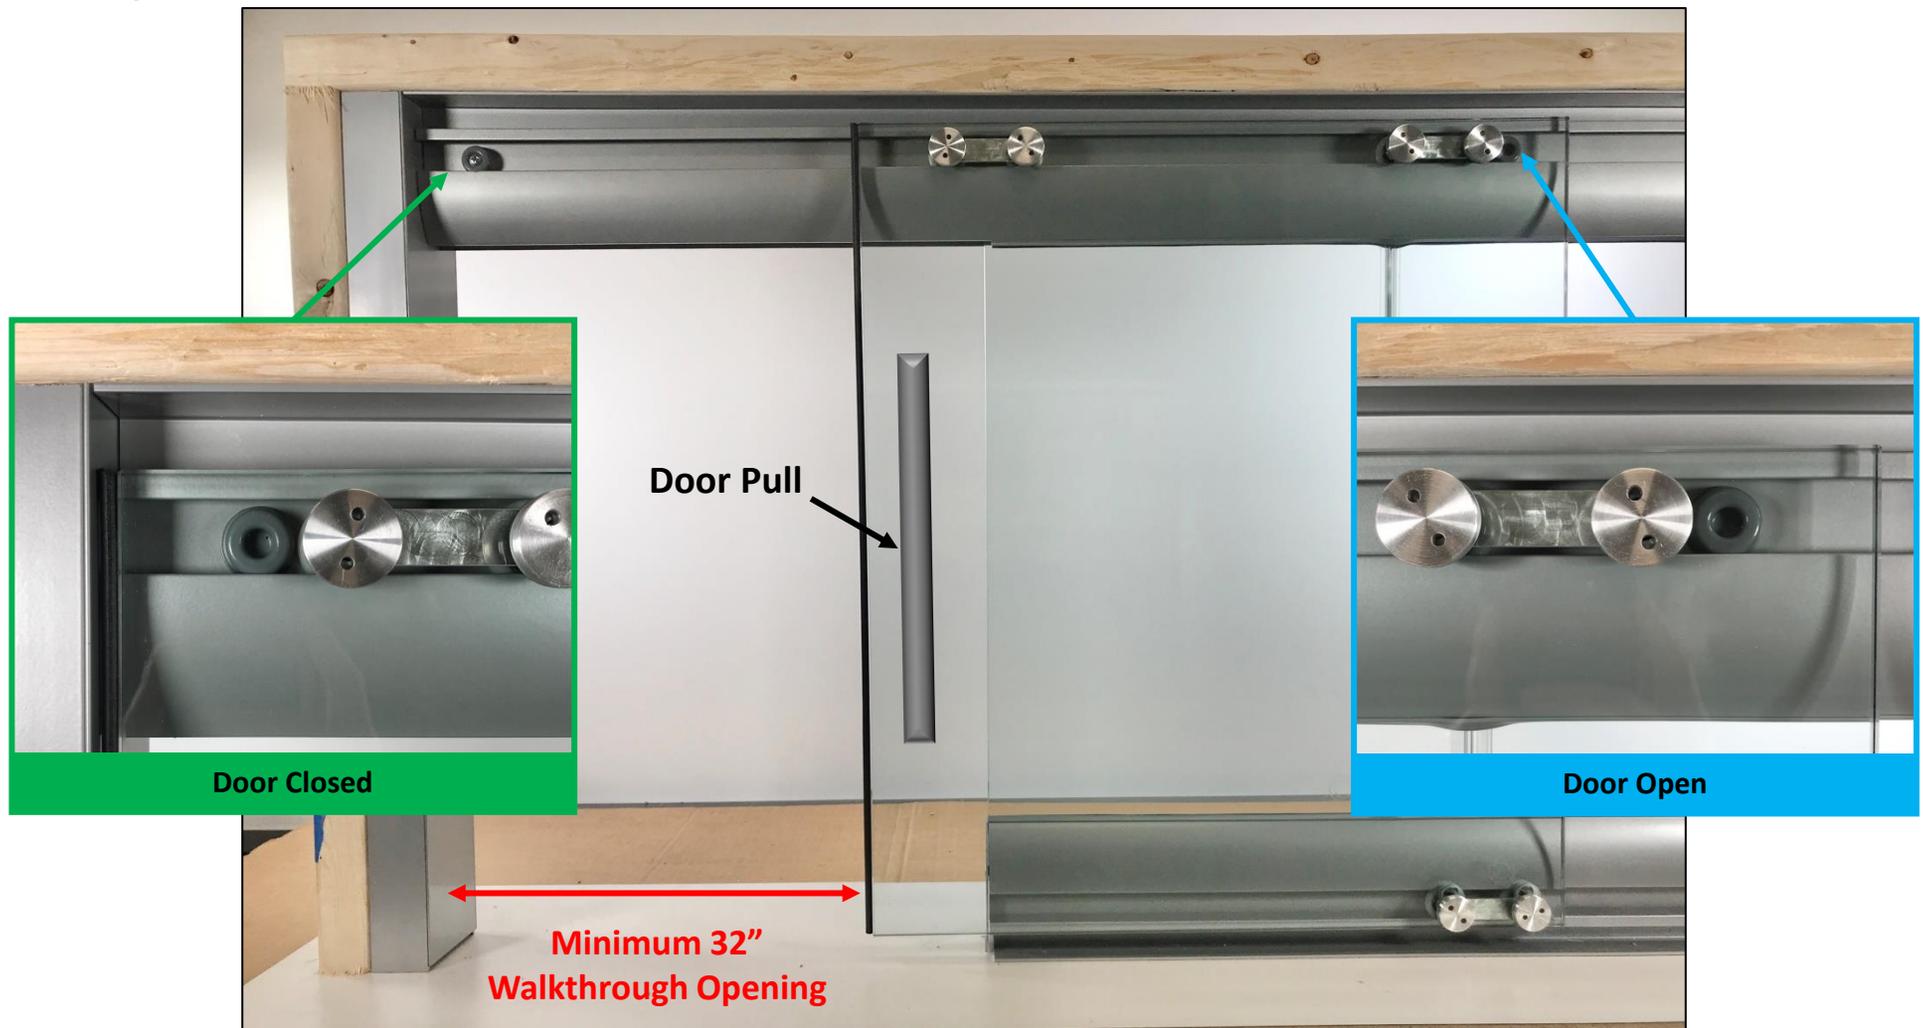

First, slide the door into its closed position. Next, place a Door Stop in front of the Carriage wheel within the View Track as shown above. Anchor the Door Stop with the provided screw. **Note:** Make sure the D-Pad is tight to the Wall-Start when determining the door stop location.

Open the door to give a **Minimum 32" Walkthrough Opening**. Place a Door Stop behind the Carriage wheel when it is in the open position. Slide the door back towards the closed direction in order to anchor the Door Stop.

Once the Door Pull is installed make sure it does not strike the fixed pane of glass when the door is opened. Also, make sure the door does not strike the framing when closed.