




View Series

Post Installation

View Series Post Installation

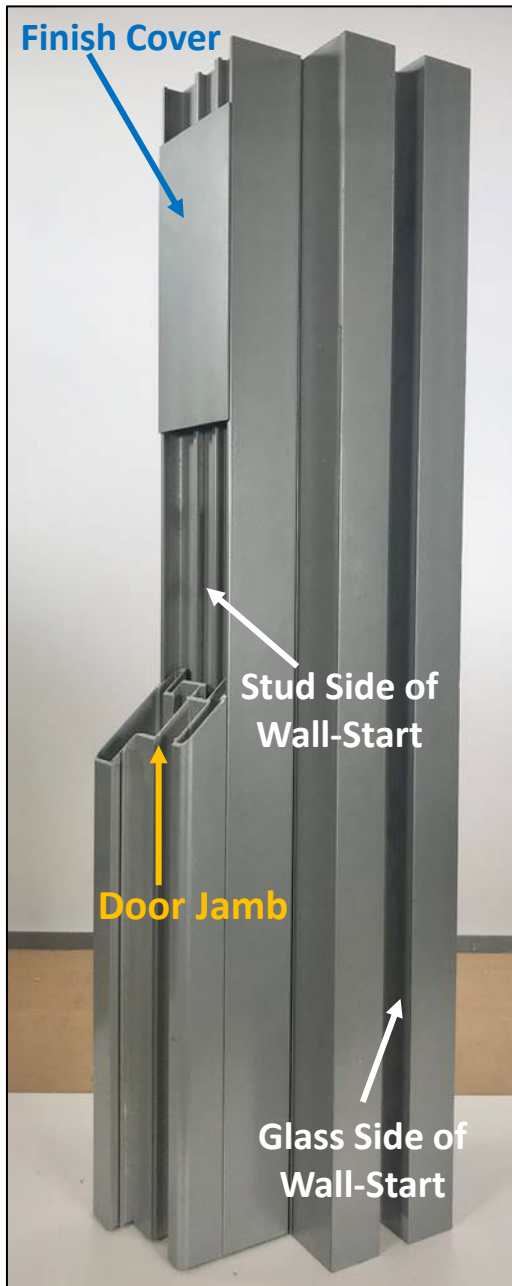

- The Flex Post will be measured and cut to run from floor to ceiling.
- The Wall-Starts will be cut to the same length as the Flex Post. They will also run floor to ceiling.
- Install the View Wall-Starts onto the Flex Post in the correct orientation. If there is fixed glass, the “Glass Side” of the Wall-Start will be facing out away from the Flex Post. If there is a swing door coming off the Wall-Start or a sliding door sliding into the Wall-Start, the “Stud Side” of the Wall-Start will face outwards away from the Flex Post.
- To attach the Wall-Start to the Flex Post:
 - Use 2 ½” screws when the “Stud Side” is facing out.
 - Use 1 ½” screws when the “Glass Side” is facing out.Make sure the Wall-Start is flush with each edge of the Flex Post when attaching. Attach through the center of the Wall-Start.
- The “Stud Side” of the Wall-Start is designed to accept a Door Jamb for swing doors and a Finish Cover for sliding doors.
- Wall-Starts are only installed when there is a wall coming off the Flex Post. If there are no other walls coming off the Post the other face(s) of the Flex Post do not receive Wall-Starts.

