




View Series

System Mounted Floor Guide Installation

Materials:


Floor Guide

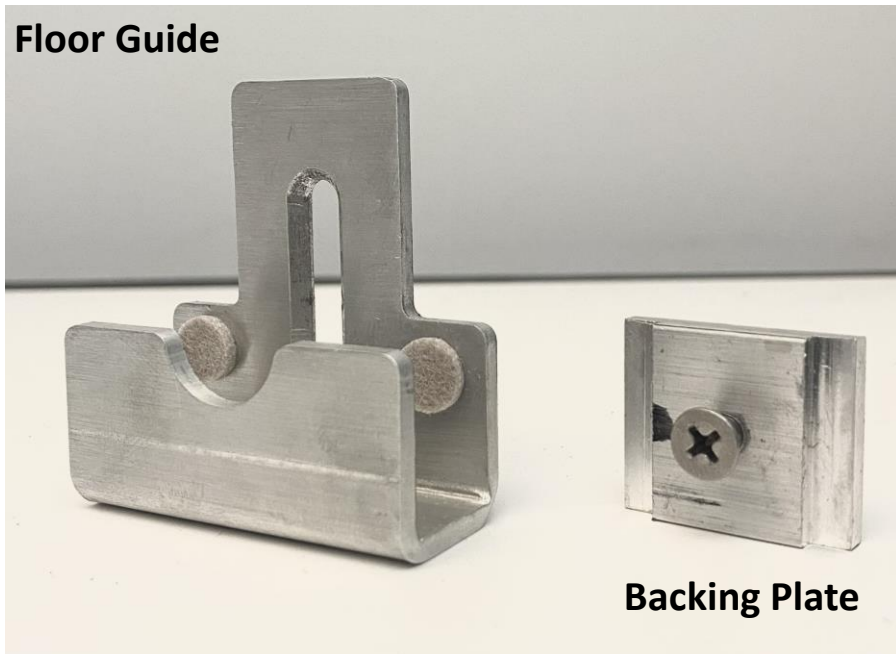


Backing Plate

View Series System Mounted Floor Guide

Front View

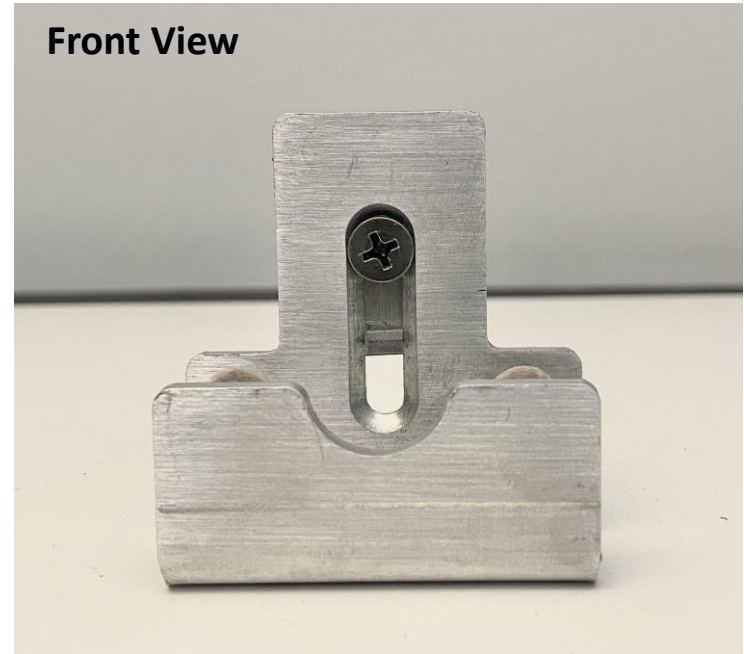


Side View

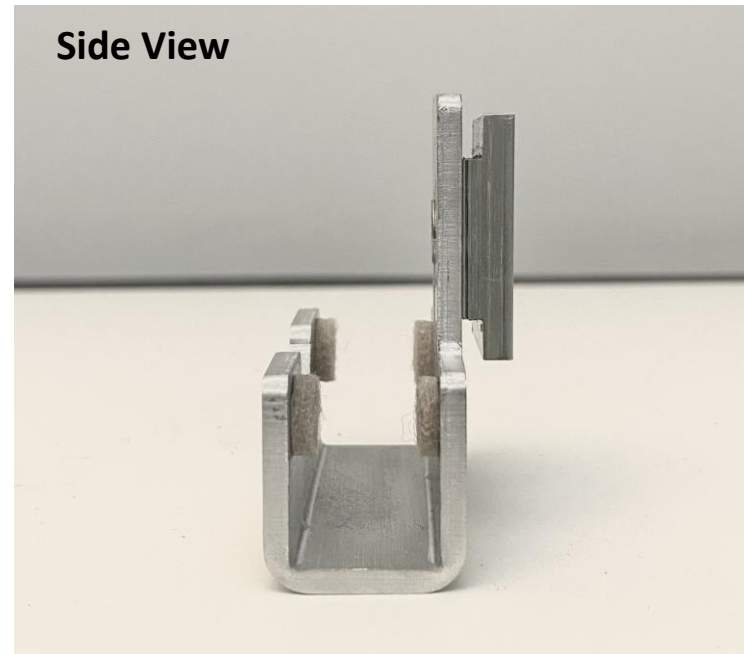

View Series System Mounted Floor Guide Installation


When installing the system mounted floor guides there are two installation situations.

Situation 1:

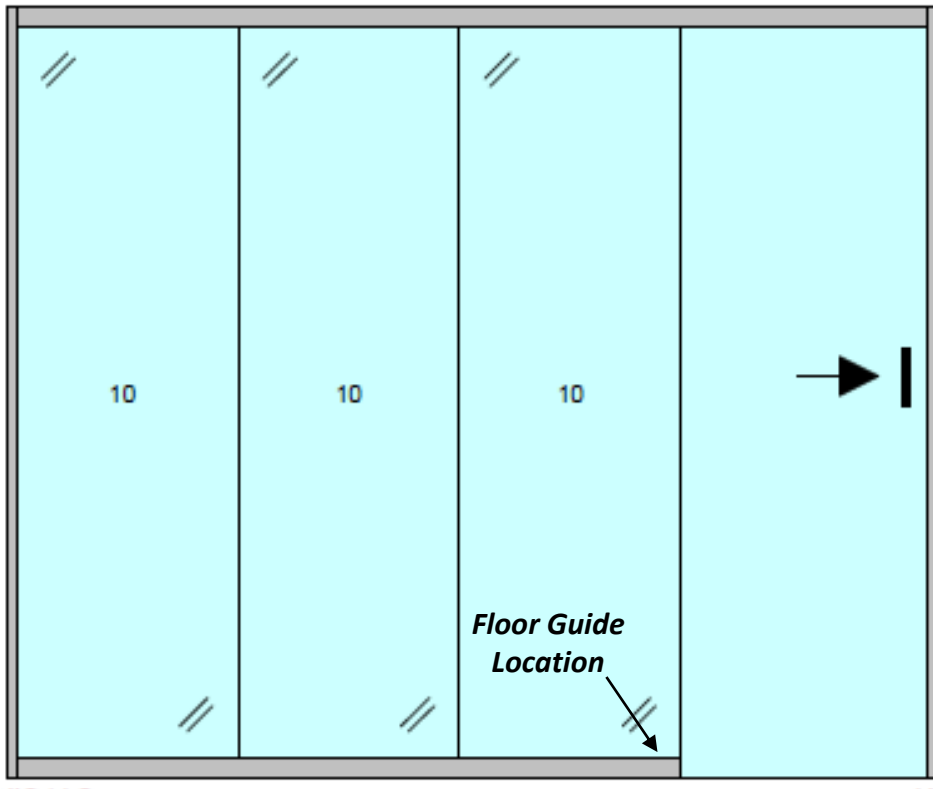

Partition wide enough to slide door past the door opening

Situation 2:

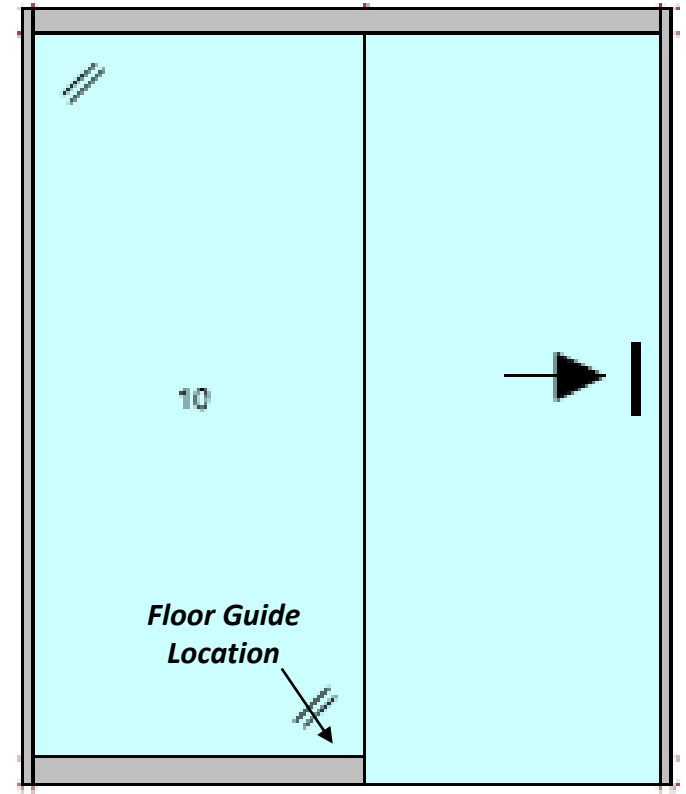


Partition NOT wide enough to slide door past the door opening

View Series System Mounted Floor Guide Installation


Situation 1: Partition wide enough to slide door past the door opening:



Install the glass door without the door stops and door handle installed. Slide the door past the opening to expose the View Track.

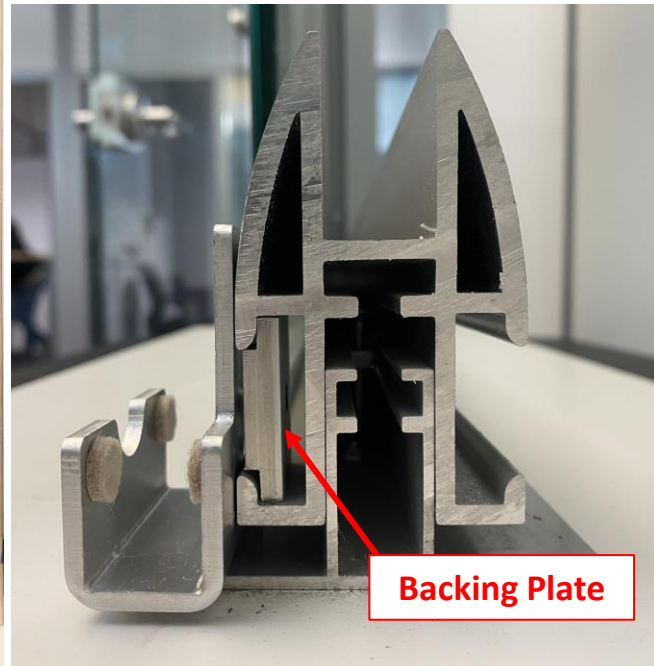


Slide the backing plate for the floor guide into the channel of the View Track.

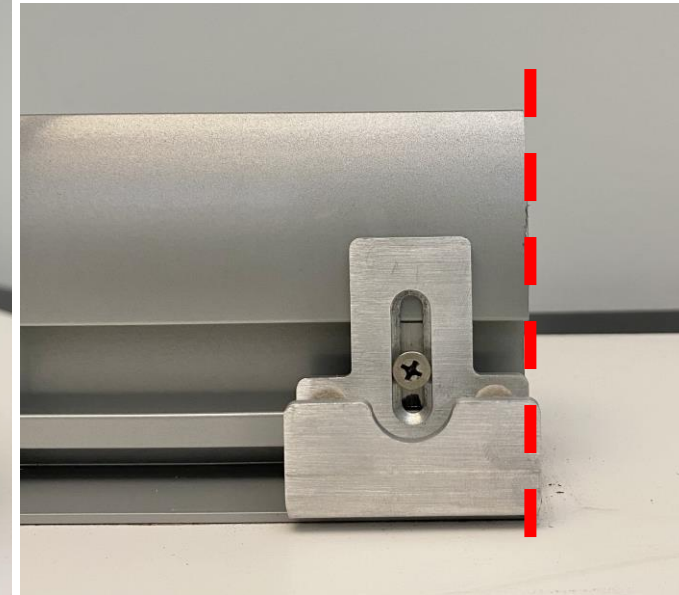


Place the edge of the floor guide flush with the end of the View Track.

View Series System Mounted Floor Guide Installation

Situation 1: Partition wide enough to slide door past the door opening:

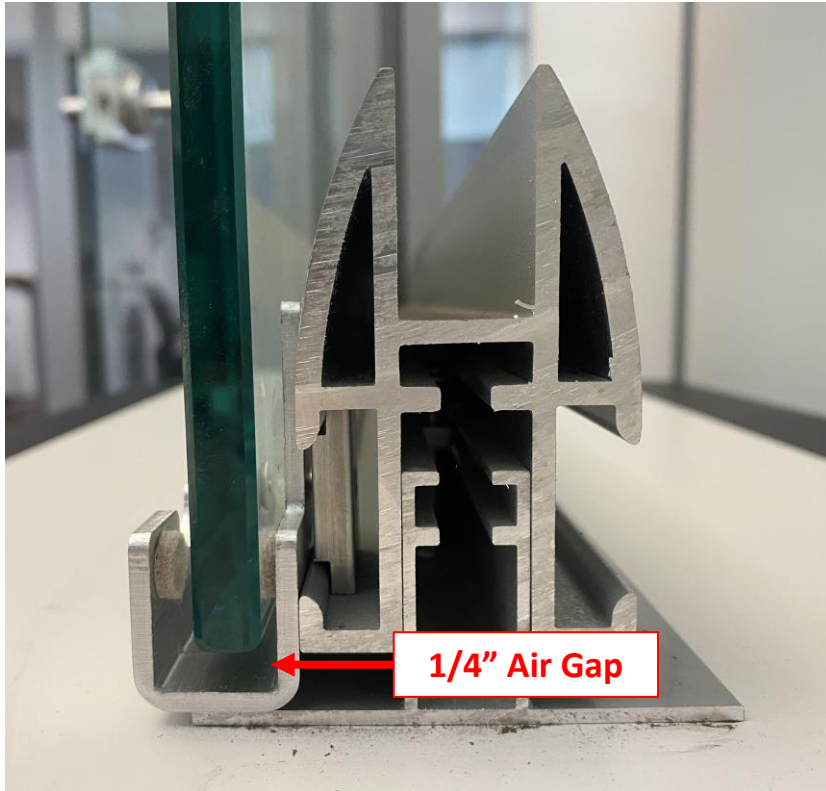

To set the height of the floor guide slide the door into the floor guide. Set the height so there is an approximate 1/4" air gap between the bottom of the door and the floor guide.

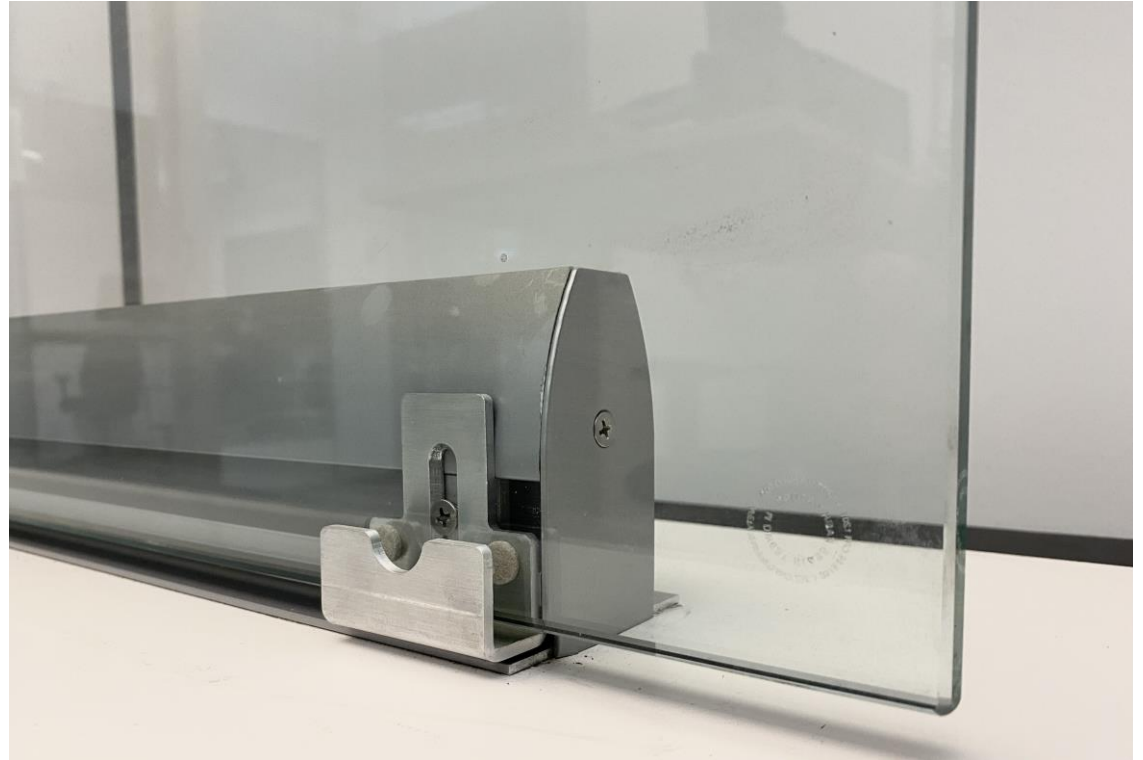

Slide the door open to allow access to the set screw. Tighten the set screw to lock the floor guide in place.

Installation complete.

View Series System Mounted Floor Guide Installation

Situation 2: Partition NOT wide enough to slide door past the door opening:



Without the door installed pre-install the floor guide into the View Track. Slide the backing plate for the floor guide into the channel of the View Track. Place the outside edge of the floor guide flush with the end of the View Track.

Pre-set the floor guide height to be resting on the View Guide. Please Note: If needed adjust the floor guide height to allow the door to be within the floor guide.

Tighten the set screw to lock the floor guide in place.

View Series System Mounted Floor Guide Installation

Situation 2: Partition NOT wide enough to slide door past the door opening:



Place shims on the floor within the door opening.

Lift the door over and into the floor guide. Place the door on the shims to allow the carriages to be installed.

Make sure the door is within the floor guide with the carriage caps properly tightened.

Remove shims from under the door.

Installation complete.