



Flex Series


Frameless Glass Sliding Door
Installation

Flex Series Frameless Glass Sliding Door Installation

Materials:

****If there are Soft Open/Close Units please reference the Soft Open/Close Installation Guide. The Carriage Assembly is different for Soft Open/Close Units****

Note: "DOOR EDGE" arrow to be pointed towards the edge of the door.

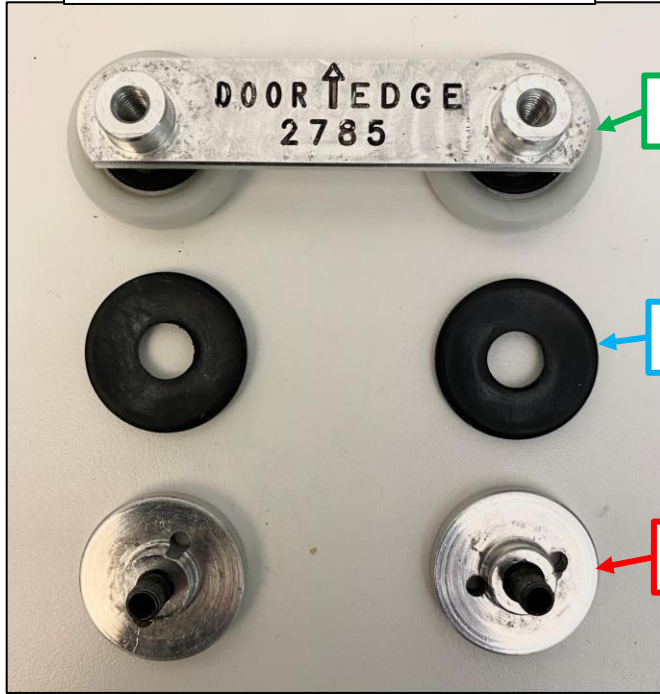


Carriage Frame

Carriage Washer


Carriage Cap

Carriage Frame Assembly

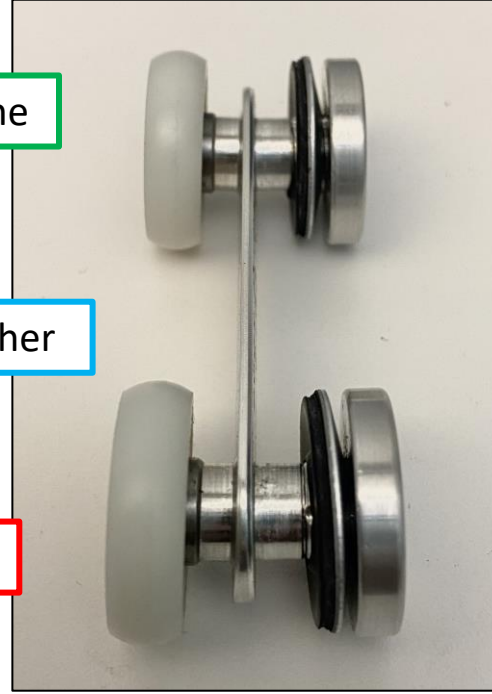

Carriage Frame Assembly Orientation

Note: Thinner portion of the carriage towards the edge of the door

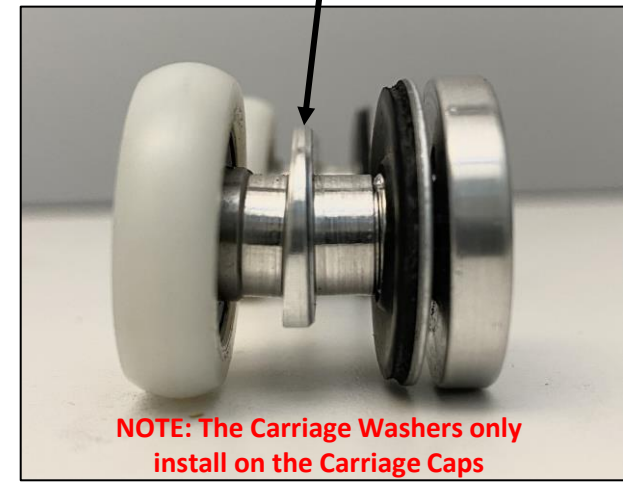

NOTE: The Carriage Washers only install on the Carriage Caps



Door Stop for Sliding Glass Doors



Surface Mounted Floor Guide with Screws



D-Pad for Sliding Glass Doors



Recommended Tool:

Adjustable Spanner Wrench for tightening Carriage Caps

Flex Series Frameless Glass Sliding Door Installation

Carriage Assembly Installation:




Carriage Frame Orientation

Install the Carriage Frame into the C-Rail with the flat side of the frame down with the "DOOR EDGE" arrow pointing towards the top edge of the door, orientation shown above. The carriages can be slid into the C-Rail from either end.

Flex Series Frameless Glass Sliding Door Installation

Door Installation Option 1:

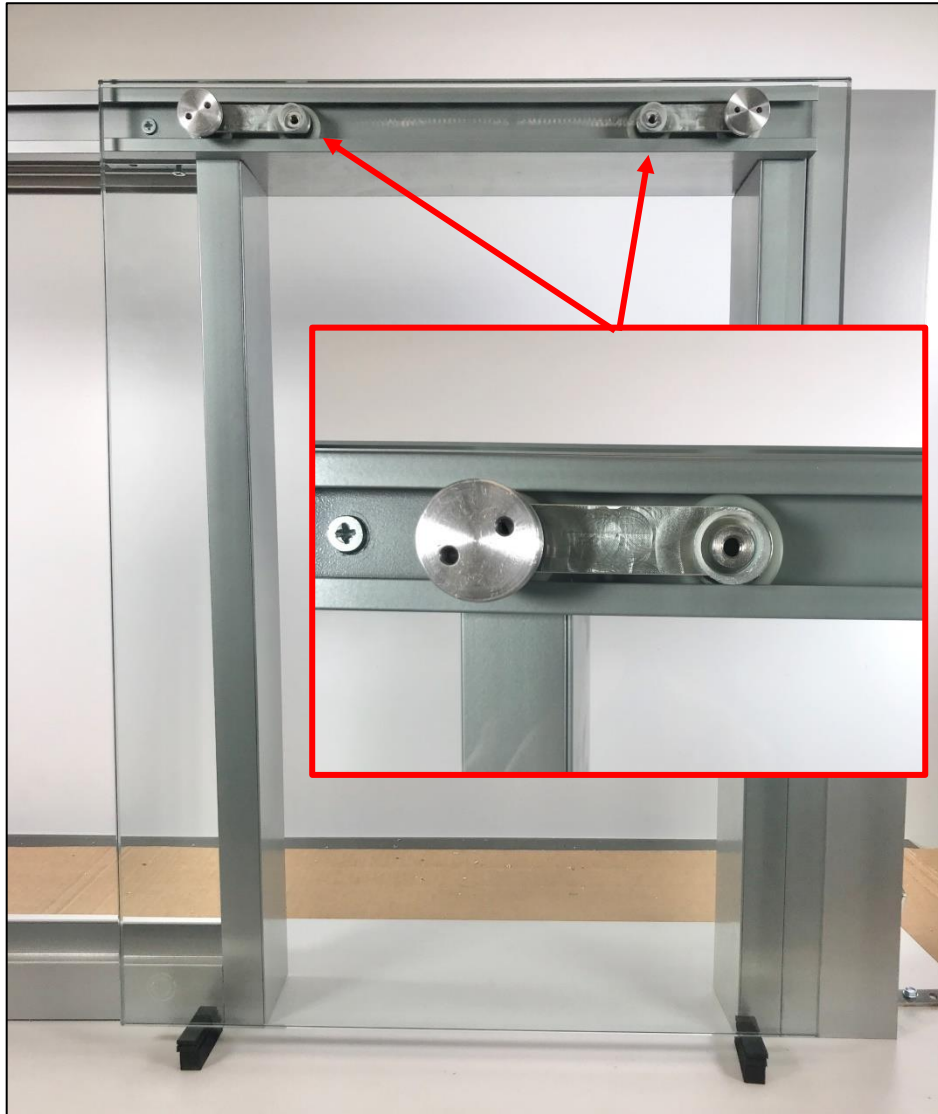

With the Carriages already in the C-Rail, place the glass door on shims to align the holes in the door with the Carriages. Press the door tight to the Track to allow the Carriages to go through the holes, as shown above.



Install the Carriage Caps with Washers onto the Carriage Frames going through the door. Tighten the Carriage Caps with a spanner wrench. Avoid overtightening the Carriage Caps, for overtightening will prevent the door from sliding smoothly. 4

Flex Series Frameless Glass Sliding Door Installation

Door Installation Option 2:



If space allows at the installation jobsite, the carriages can be preinstalled on the door and the door can be slid onto the C-Rail from either end.

Flex Series Frameless Glass Sliding Door Installation

Surface Mounted Floor Guide Installation:




Center the Floor Guide on the stud. Run a screw through the top slotted hole of the floor guide. The top hole will allow you adjust the floor guide up or down.



Adjust the guide up or down as needed. Once the guide is in the correct position, proceed to anchor the floor guide in place through the second hole.

Flex Series Frameless Glass Sliding Door Installation

Door Stop Installation:

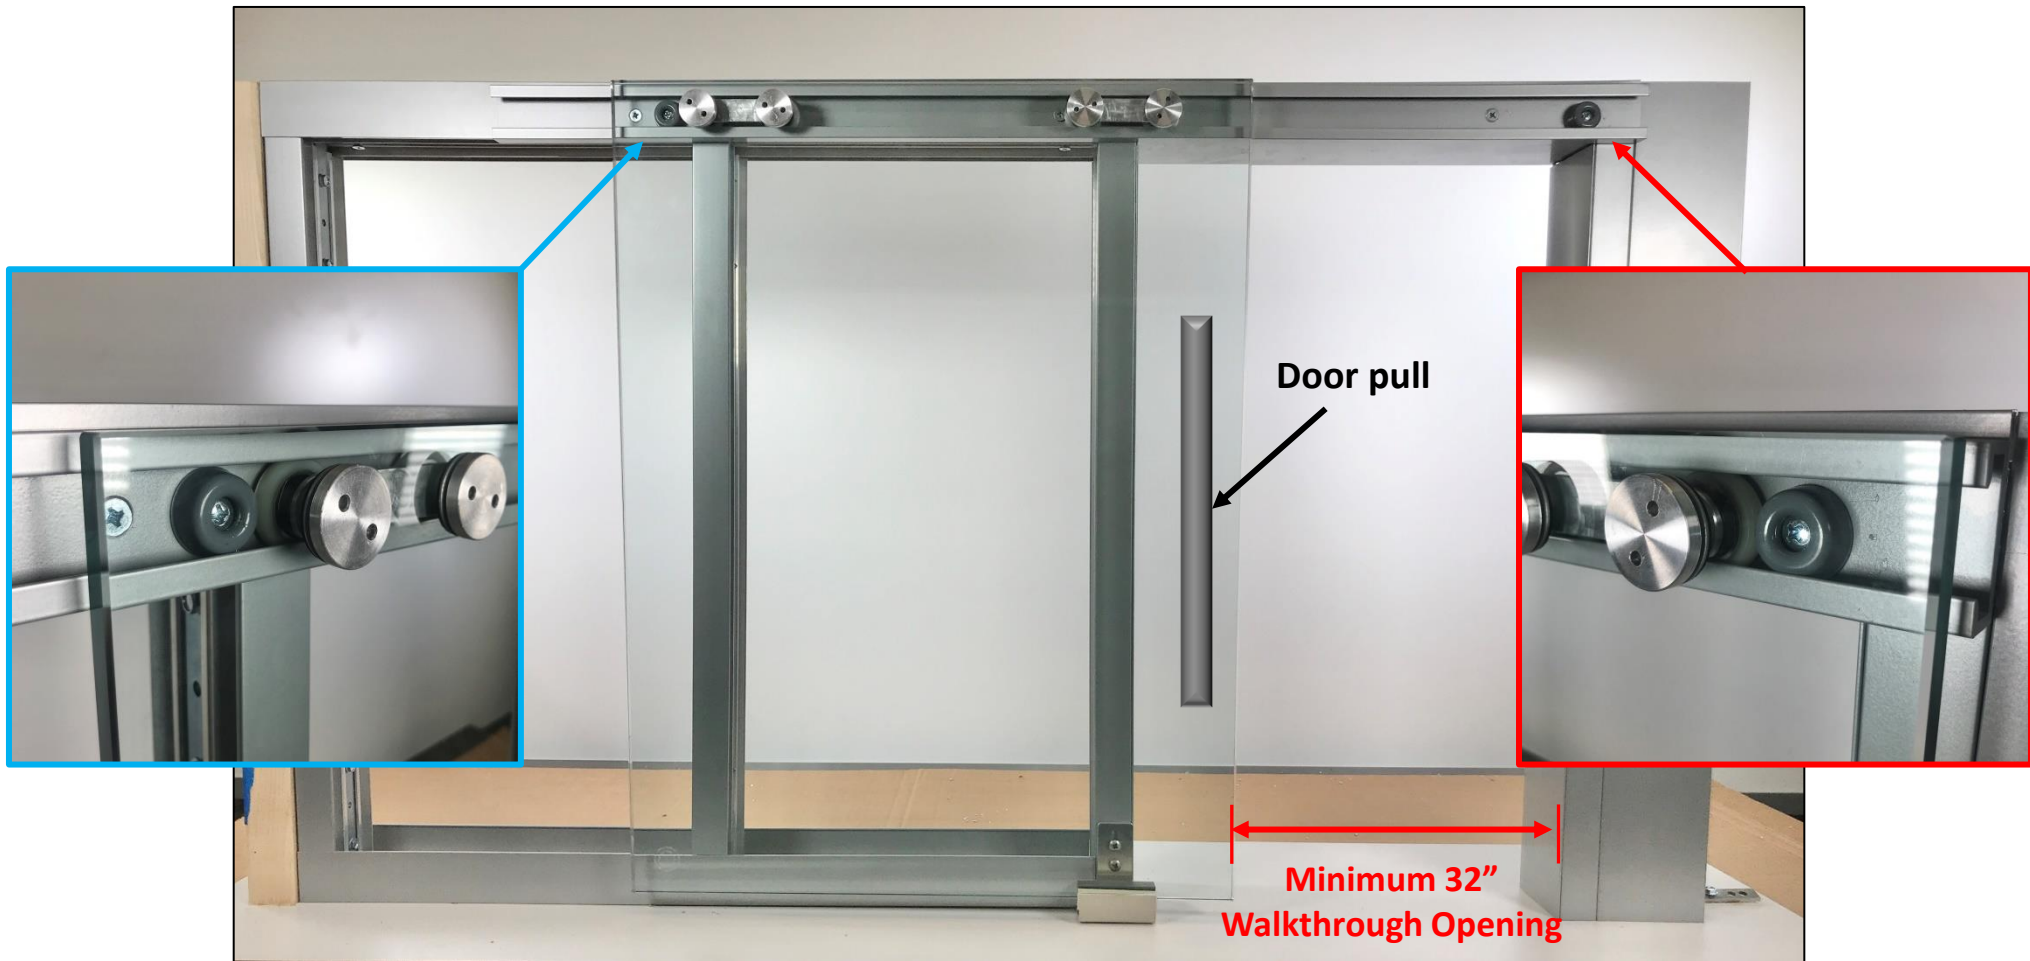

With the door in the closed position, place a Door Stop in front of the Carriage wheel inside the C-rail. Anchor the Door Stop with the provided screw.

Open the door to give a **Minimum 32\" Walkthrough Opening**. Place a Door Stop behind the Carriage wheel when it is in the open position. Move the door and anchor the Door Stop.

Ensure the door opens and closes properly. Installation is complete.